
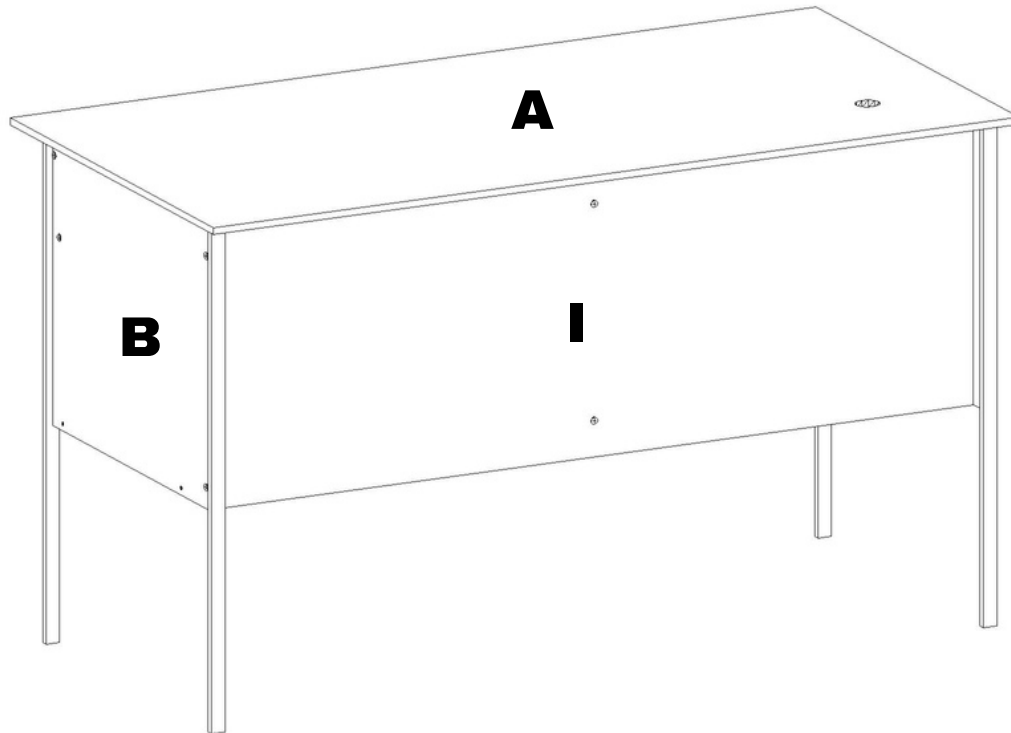


MANUAL RAKIT MT-130



AKSESORIS

NO	PICTURE	QTY	CHECKLIST
1	 BAUT DU	8	
2	 JCBC 6X40	14	
3	 OLIMPIC 6X1 1/2	4	
4	 DOWEL	3	
5	 JRN	14	
6	 FH 6X1/2	33	
7	 DUPLO	2	
8	 HANDLE T 32	1	
9	 HANDLE T 64	1	
10	 BAUT HANDLE	4	
11	 KUNCI	2	
12	 L GRENDL	1	
13	 KUNCI L	1	
14	 PAKU	20	
15	 MINIFIK	8	
16	 REL	1	

KOMPONEN PANEL


CODE	NAME	CHECKLIST
A	TOP TABLE	
B	KA KN	
C	KA KR	
D	KA TGH	
E	SDG BLKG	
F	SEKAT	
G	PINTU	
H	ALAS BWH	
I	SDG DPN	
J	KAKI BESI	
K	LACI DPN	
L	LACI KN	
M	LACI KR	
N	LACI BLKG	
O	TRIPLEK LACI	

MANUAL BOOK
GRACE MT-130

SCAN DISINI !!

*MOHON MELAKUKAN PENGECEKAN SEBELUM MERAKIT

1

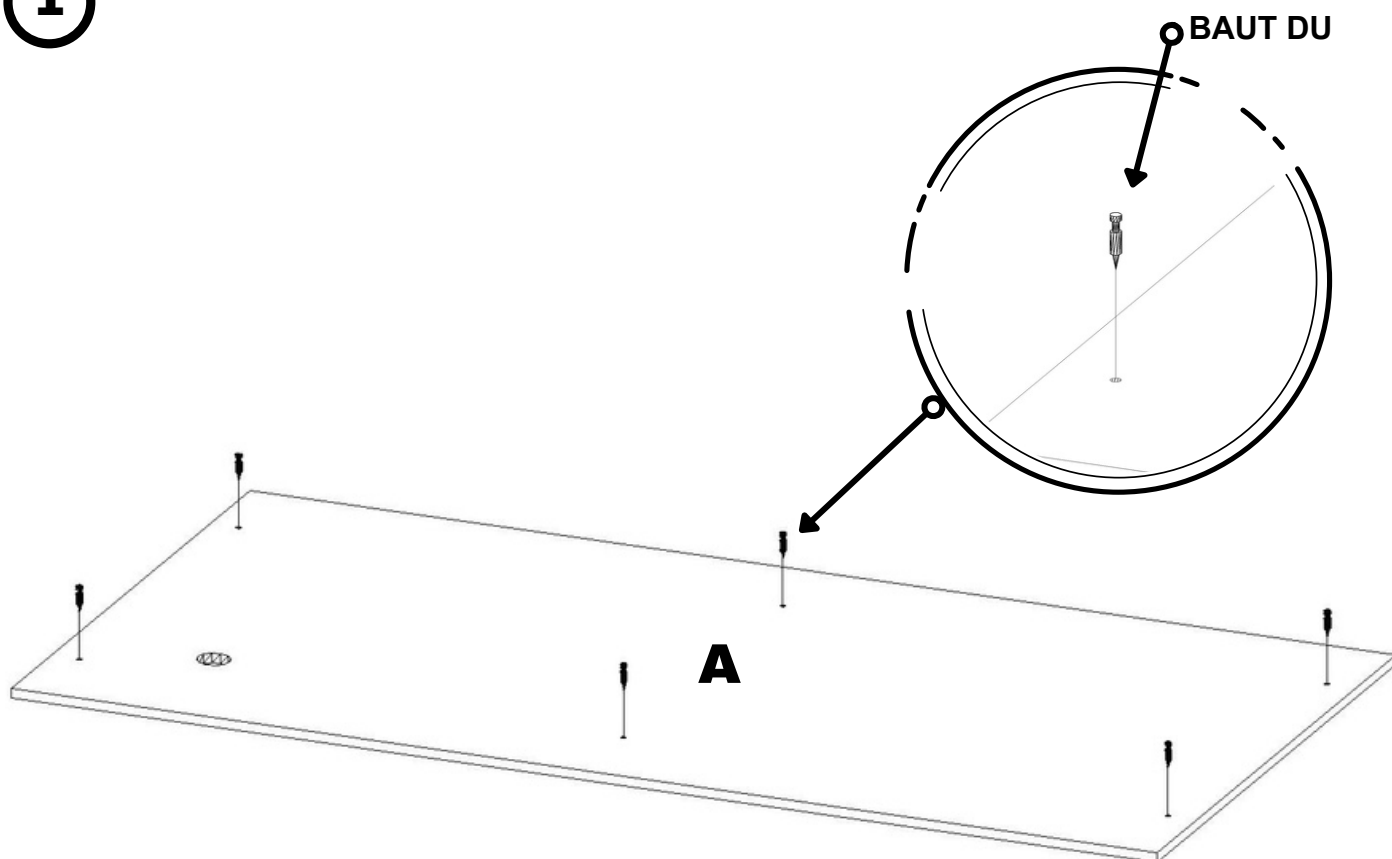

2


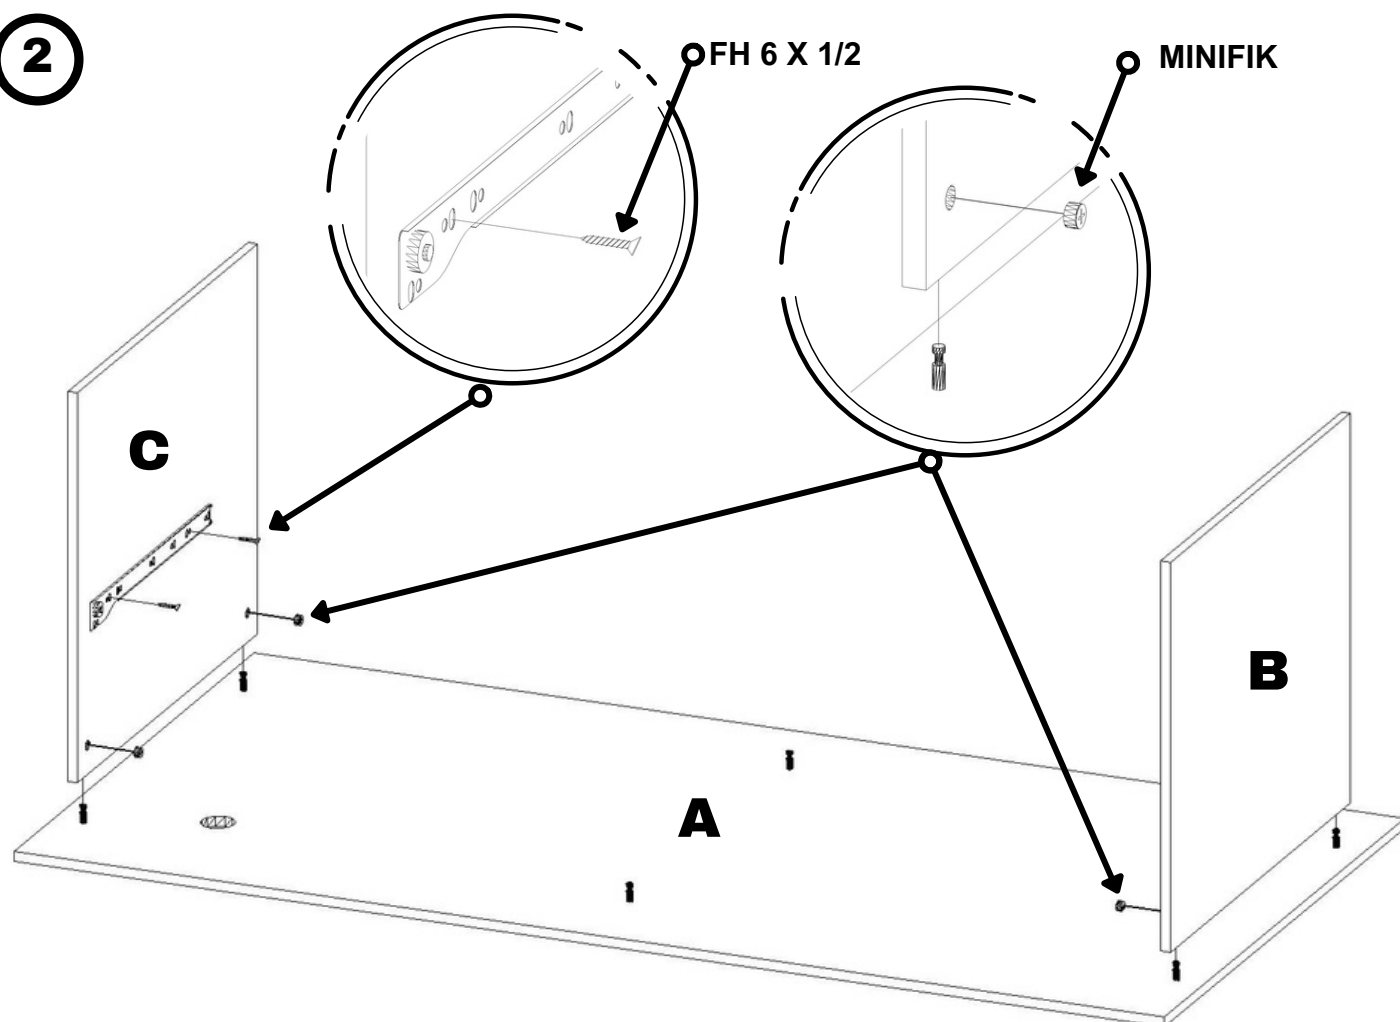


Diagram 4 illustrates the step of attaching the door to the cabinet frame. The main assembly shows the door (D) being positioned between the side panels (B and C) and the base (E). Three circular callouts provide detailed views of the attachment points:


- The top-left callout shows the door being aligned with the side panel (C) using a **MINIFIK** hinge.
- The top-middle callout shows the door being aligned with the side panel (B) using an **FH 6 X 1/2** screw.
- The top-right callout shows the door being aligned with the base (E) using an **FH 6 X 1/2** screw.

The door (D) is shown with a **DOWEL** being inserted into the bottom edge to secure it to the base (E).


5

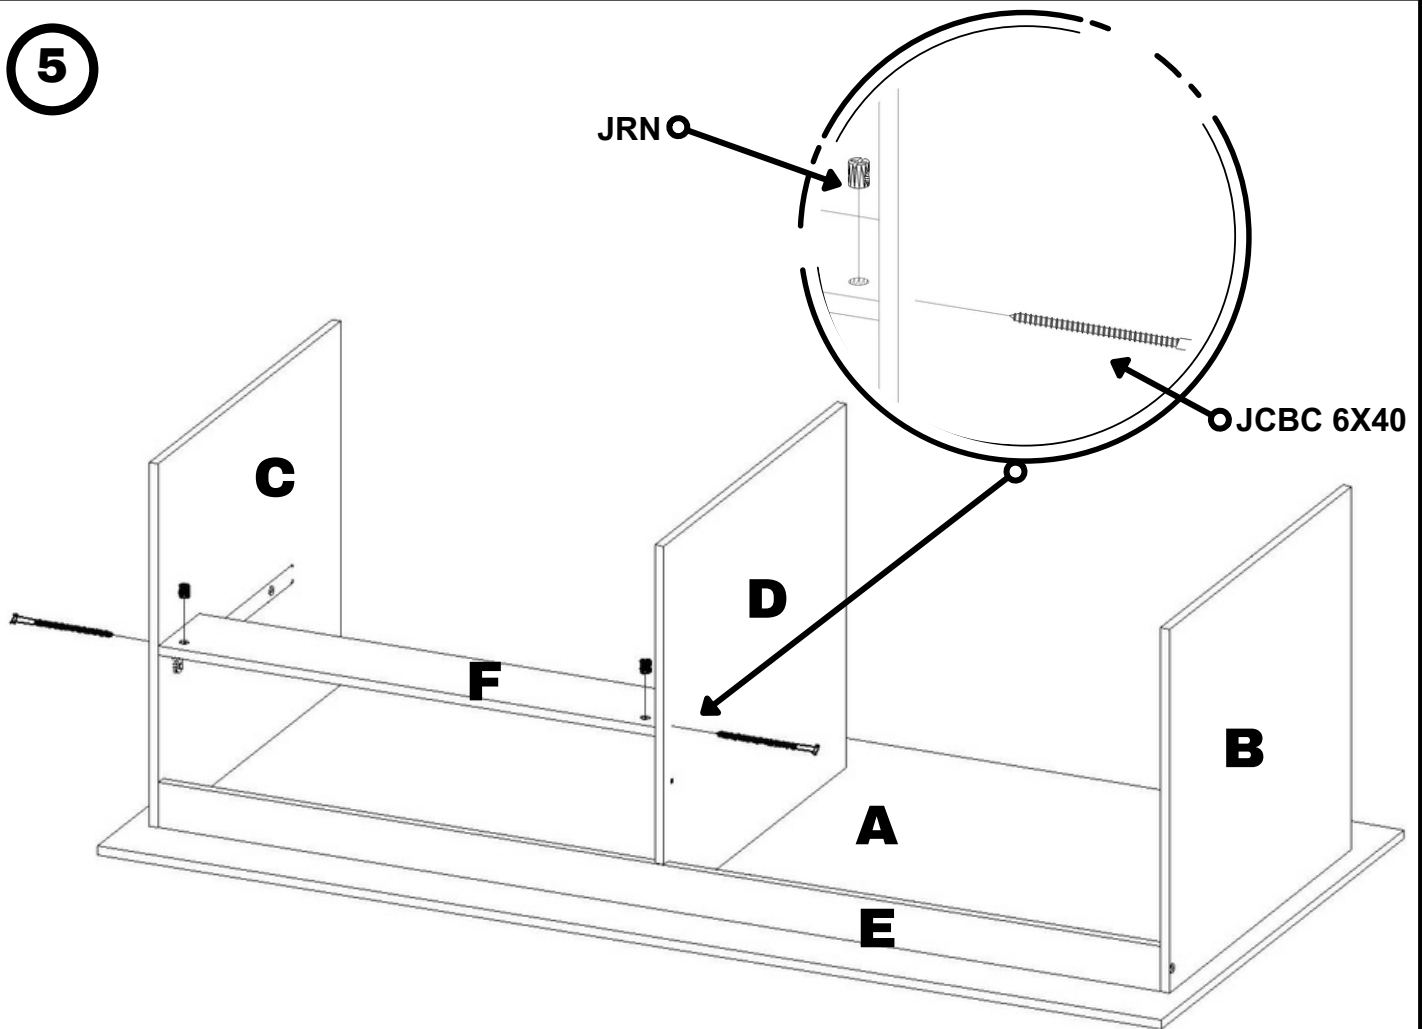


6


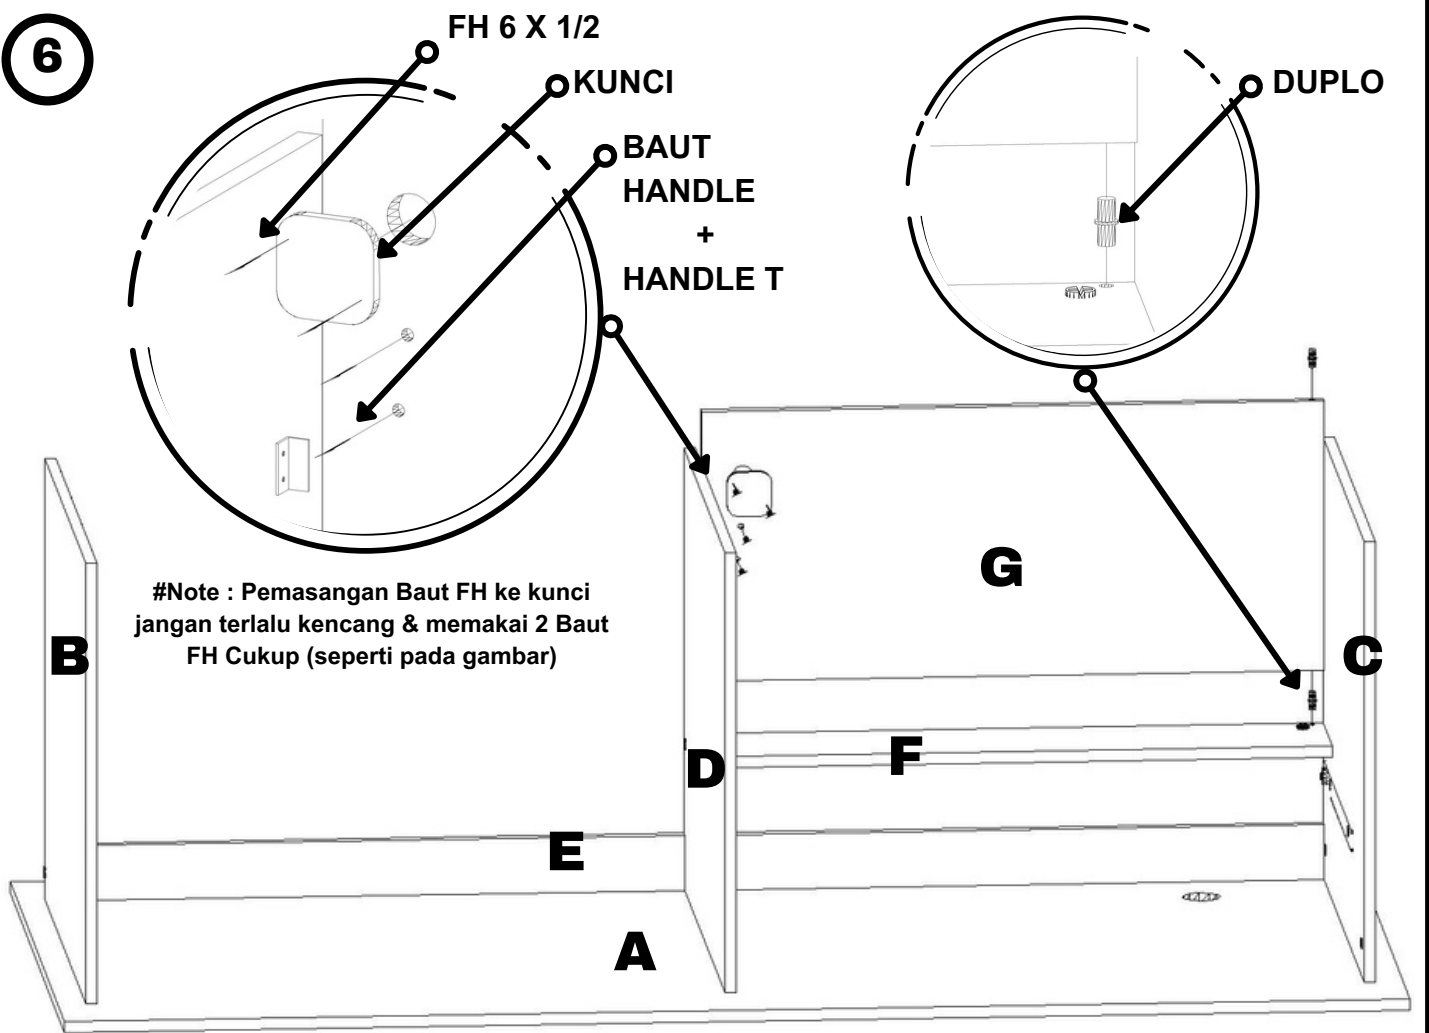


7

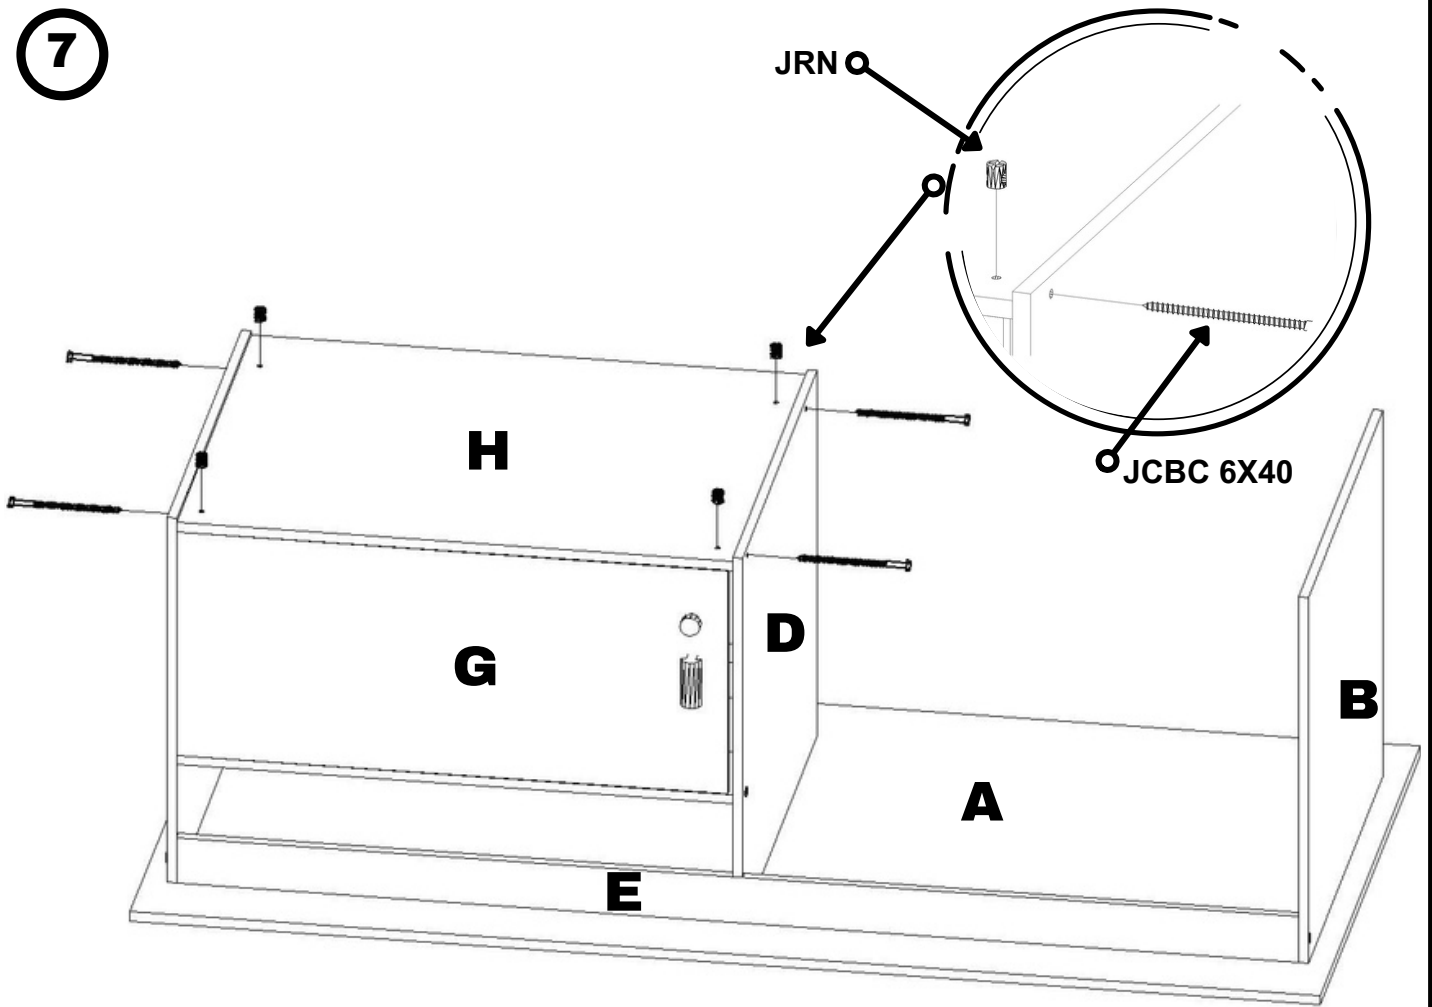


8

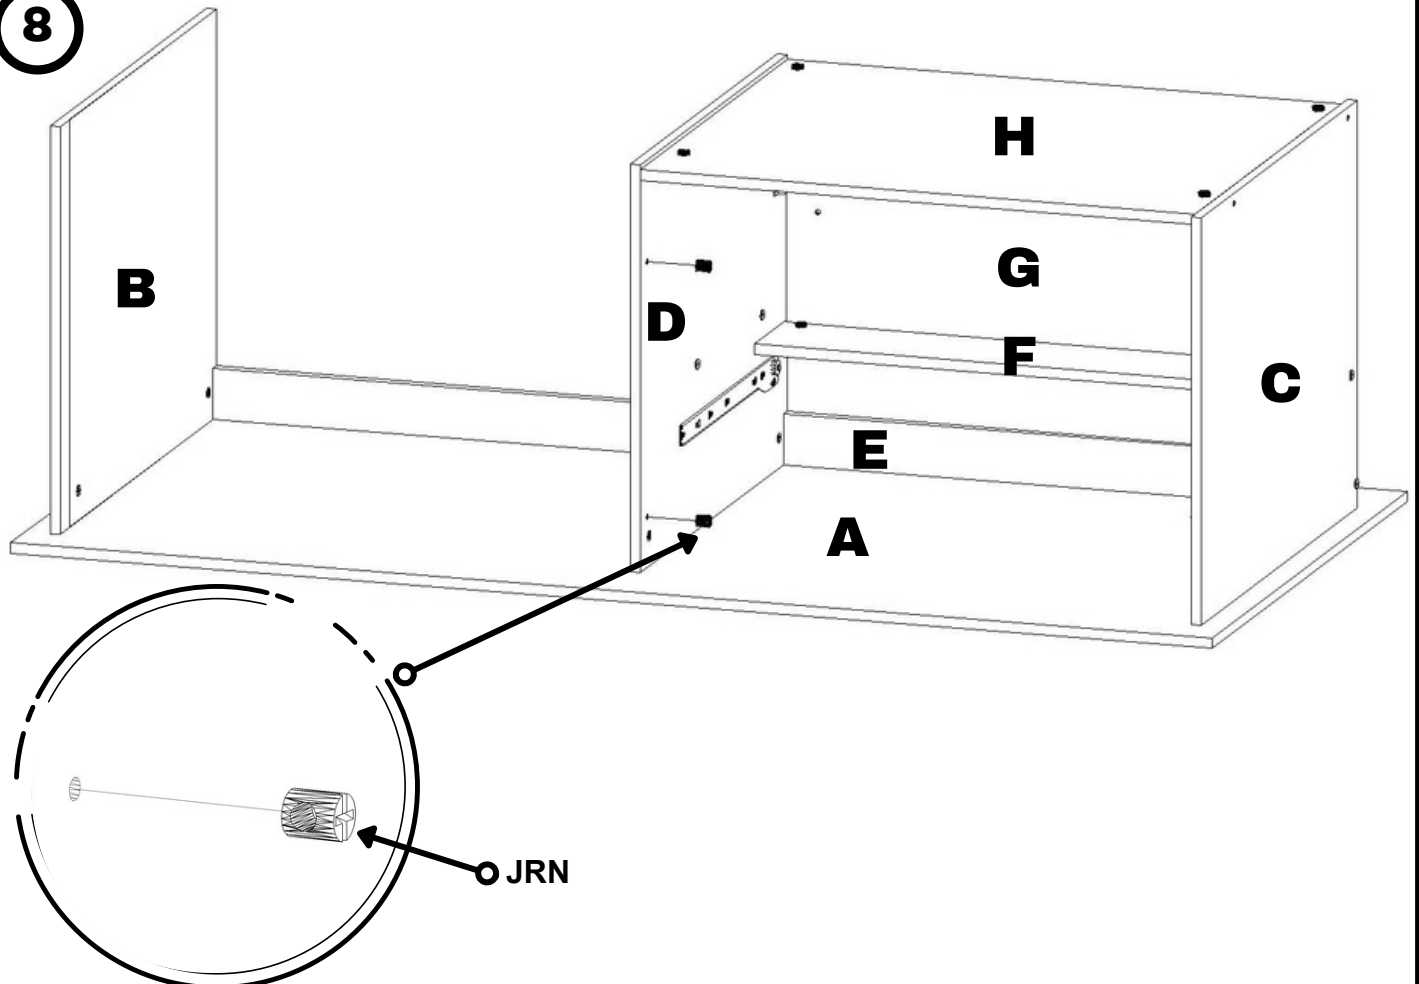

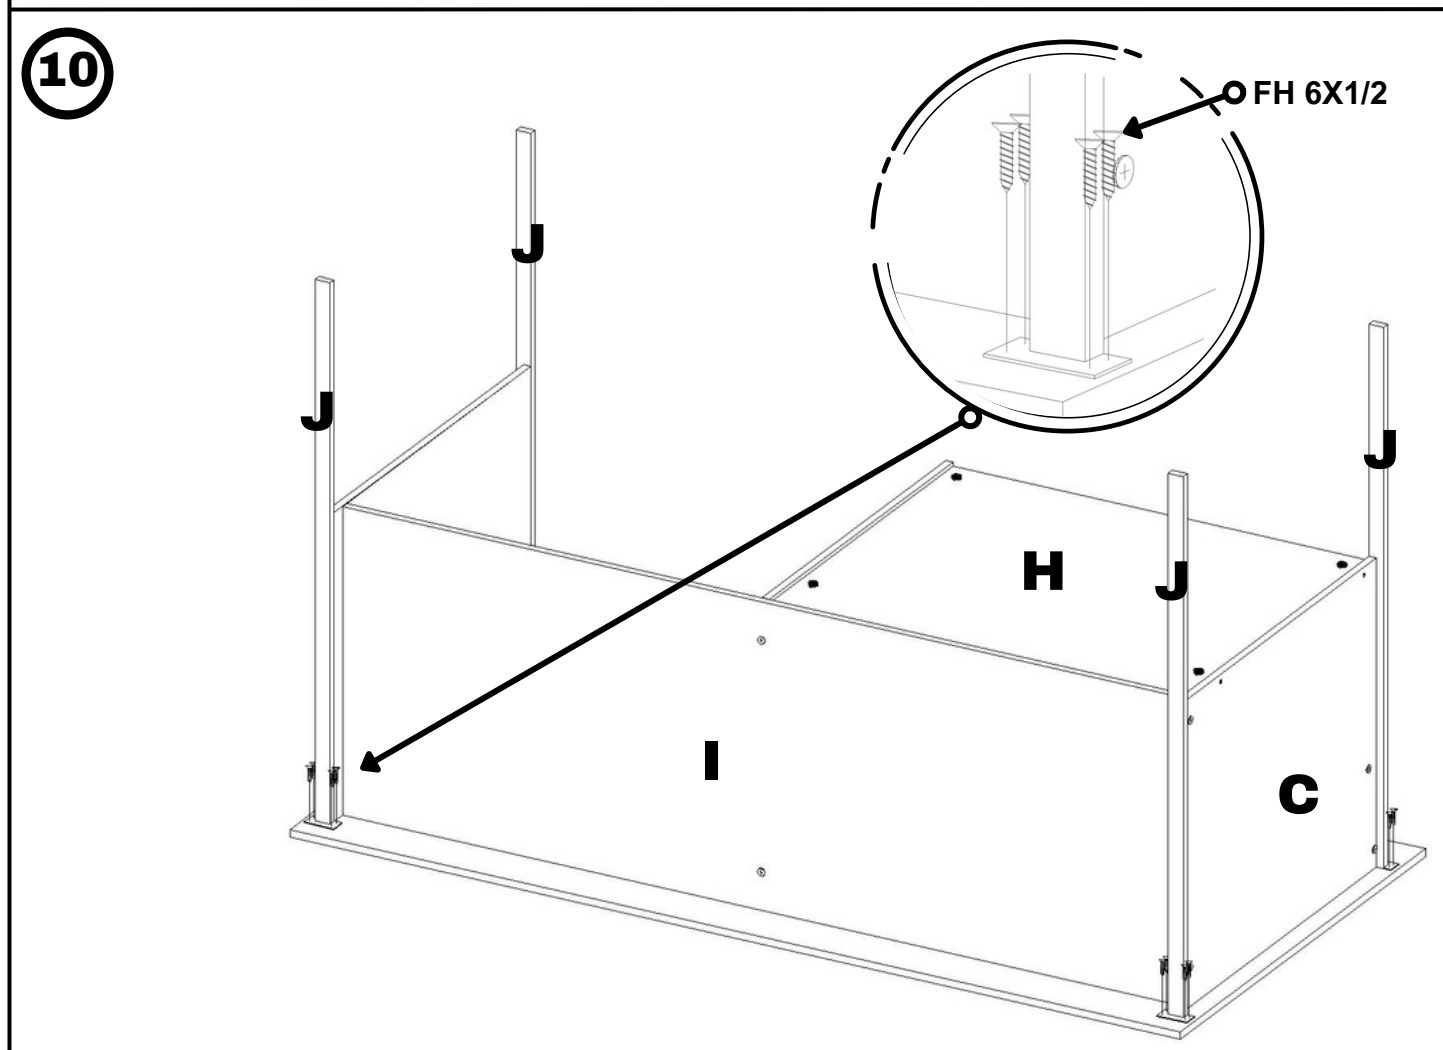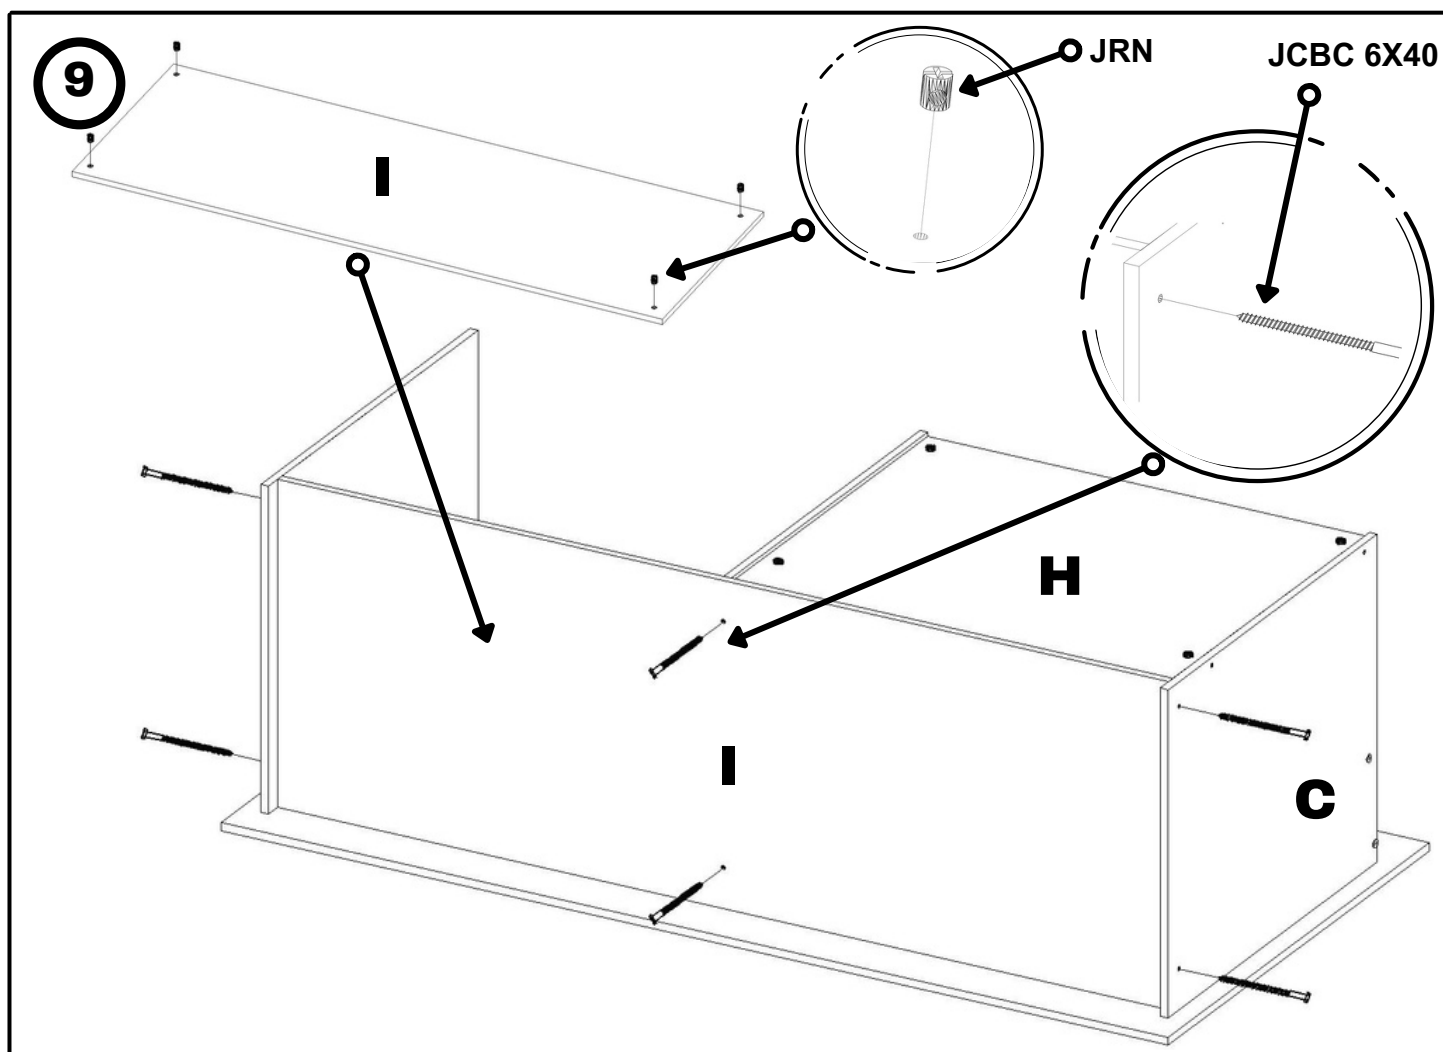


1
1

#Note : Pemasangan Baut FH ke kunci
jangan terlalu kencang & memakai 2
Baut FH Cukup (seperti pada gambar)

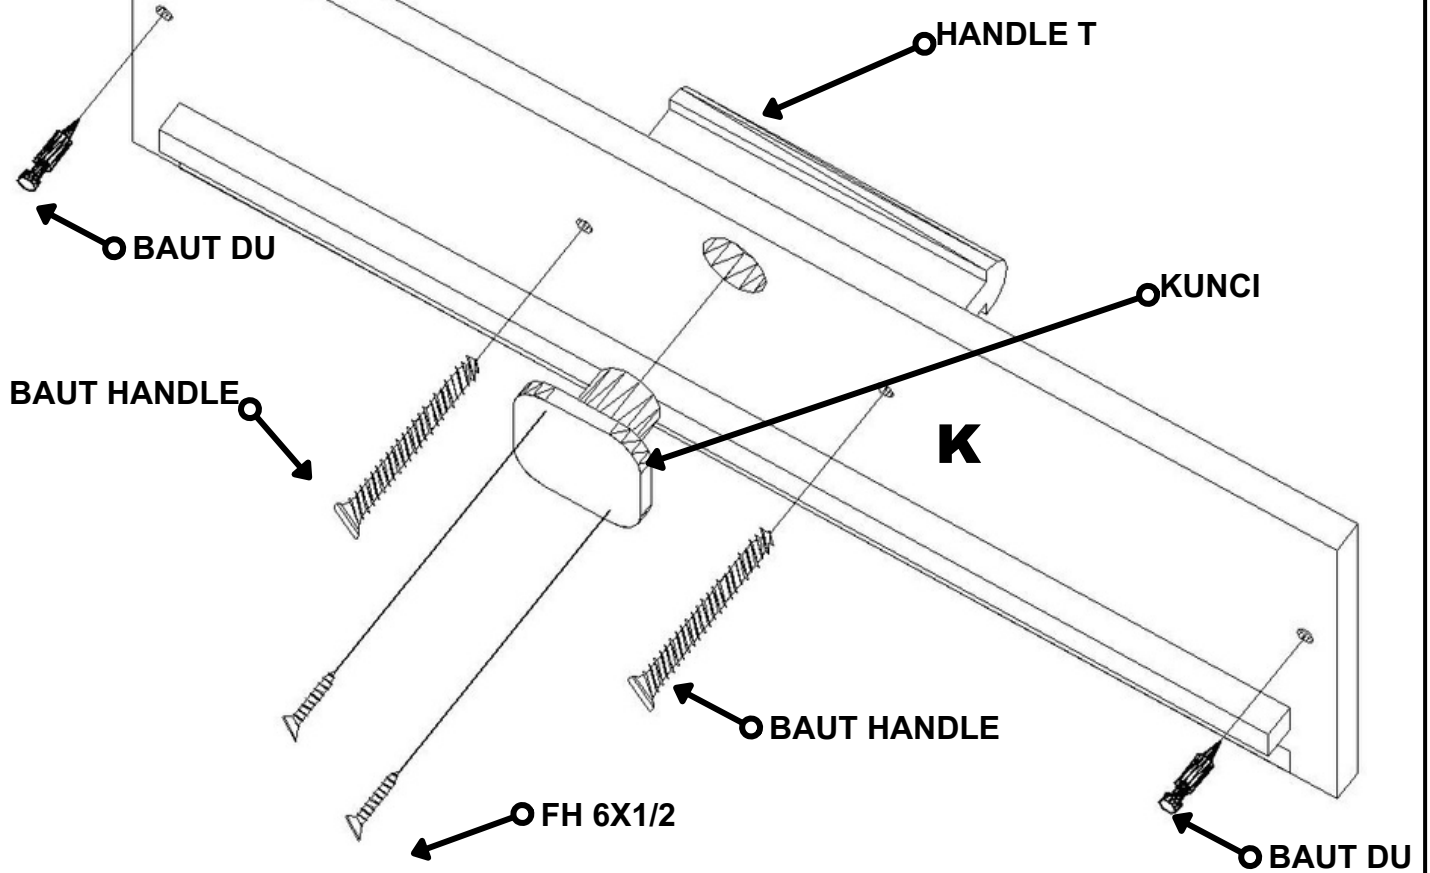

1
2

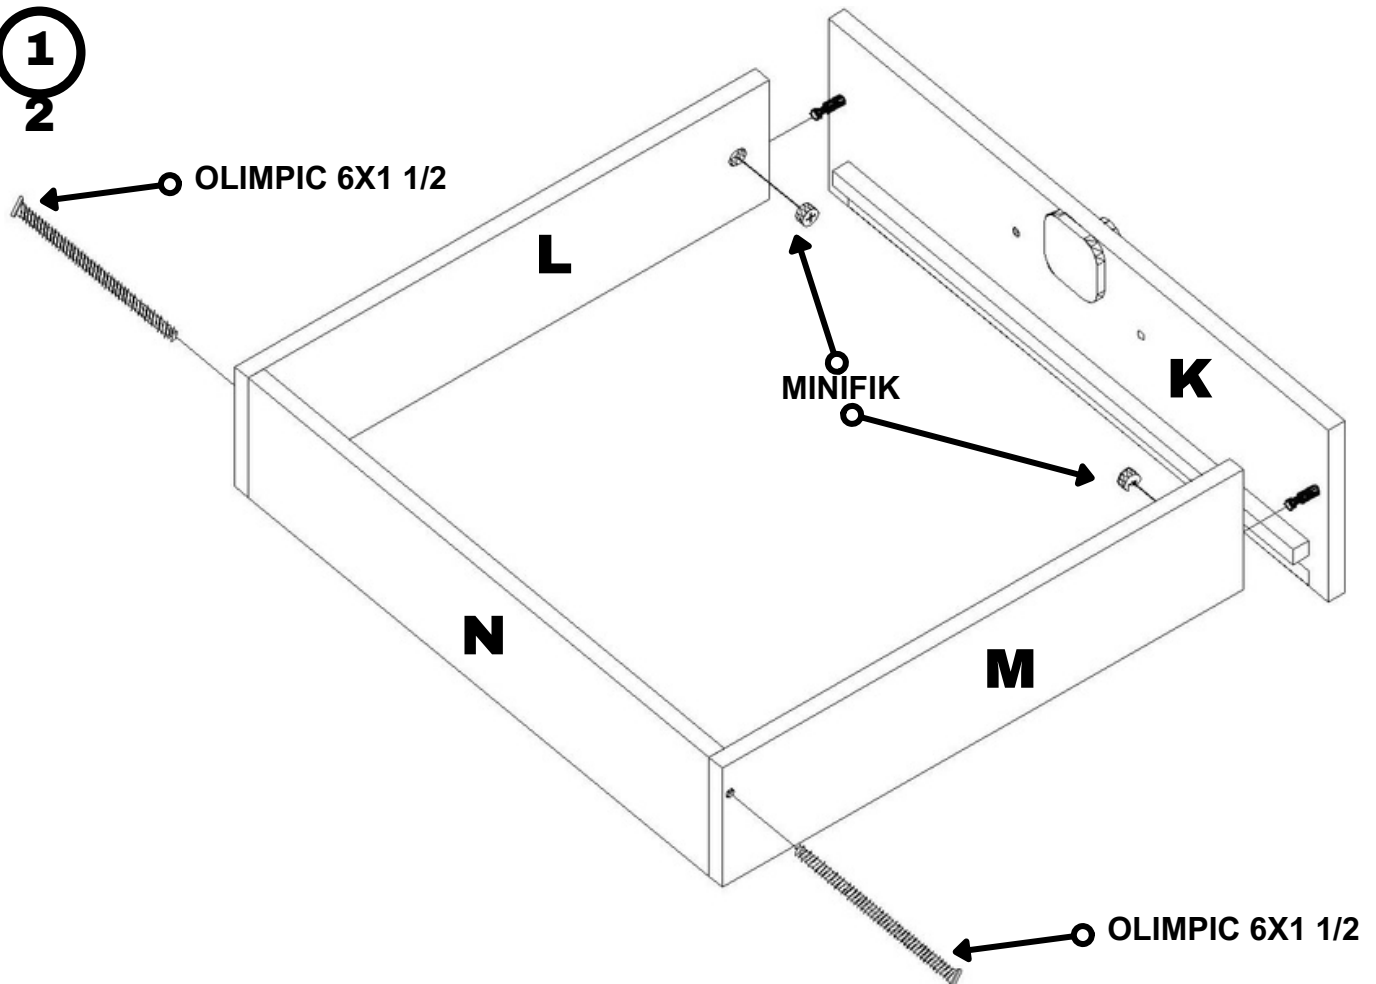

1
3

